

GEE PEE®
Always with you

GEE PEE – 2711
USER MANUAL



© 2010. All rights are reserved. No part of this document may be reproduced without permission.

While all efforts have been made to ensure the accuracy of all contents in this manual, we assume no liability for errors or omissions or statements of any kind in this manual, whether such errors or omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.

Protect our environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.

Note: User's Manual is Just to guide the user about the functionality of the phone. This does not seem any certificate of technology. Some functions may vary, due to modifications and up gradations of software or due to print mistake.

Table of Content

FOR YOUR SAFETY.....	1
GENERAL INFORMATION.....	2
KNOW YOUR MOBILE PHONE.....	3
IMPORTANT INFORMATION.....	5
Use of Passwords.....	5
Battery Information.....	6
Usage & Maintenance.....	7
Emergency Calls.....	8
GETTING STARTED.....	9
First Call.....	9
Inserting a SIM Card.....	9
Inserting a T-Flash Card.....	10
Charging the Battery.....	10
CALLING.....	11
GUIDE TO MENU OPERATIONS.....	12
Phonebook.....	12
Messaging.....	12
Call Center.....	15
User Profiles.....	16
Media Center.....	17
Fun & Games.....	19
Settings.....	20
Organizer.....	22
Services.....	23
APPENDIX.....	24
Appendix A: Guidance on Entry Methods.....	24
Appendix B: Troubleshooting.....	25

For Your Safety

Before using your phone, please read the following important information to eliminate or reduce any possibility of causing damage and personal injury.

	Do not use wireless phones while driving.
	Switch off wireless devices in aircraft. The signal may cause interference. Using them on aircraft is illegal.
	Do not use mobile phones where blasting is in progress. Follow any regulations and rules strictly.
	Do not use mobile phones at Petrol stations. Don't use near fuel or chemicals. Do not dispose your battery or mobile in a fire.
	Follow any regulations or rules in hospital and health care facilities. Switch phone off near medical equipment.
	All wireless devices may get interference that could affect performance.
	The repair or installation of the device should be done at Authorized service centers
	Use only approved accessories and batteries.
	Use only in normal position. Do not expose your phone to extreme high temperatures above +60°C (+140°F) . Do not use anything static to clean your phone.
	Ensure the phone is turned on and in service. Enter the emergency number, then press Pick Up key. Give your location. Do not end the call until told to do so.

Improper use will invalidate the warranty! These safety instructions also apply to original accessories.

GENERAL INFORMATION

Antenna

Use of other antenna devices could damage your mobile phone and reduce performance. Your phone has a built-in antenna. Don't touch the antenna area unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Network Service

A lot of features described in this manual are called network service. They are special services provided by wireless service providers. You should subscribe to these services from your home service provider and learn instructions on uses before you select the network you want to use.

Accessories

Li-Ion battery is the manufacturer-approved rechargeable battery available for your phone. May be some batteries performs best after several full charge/discharge cycles.

Use batteries, chargers and accessories approved by the phone manufacturer with this particular model. The use of any other types will invalidate any approval or warranty applying to the phone, and

may be dangerous. Please consult with your dealer for availability of approved accessories.



Positions of Phone Keys

1. Earpiece	9. Number keys
2. Screen	10. Torch
3. SIM2 Calling key	11. FM Antenna
4. Direction key	12. Cord hole
5. SIM1 Calling key	13. Charger and accessories connector
6. Right Soft key	14. Speaker
7. OK key	15. Camera
8. Call End key / Power key	16. Battery Cover

Functions of Keys

Key	Name	Description
	SIM1 Calling Key	Making or answering a call. In the standby mode, press this key to access the Call Logs.
	Left Soft Key/SIM2 Calling Key	Use the left soft key to execute to functions indicated at the left of the prompt bar on the screen. When the "Dual SIM open" has been selected, making a call with SIM2 card after press the number key or get into the function of phonebook.
	Call end Key / Power key	End an ongoing call. Press and hold this key to turn on or off the mobile phone. In the menu mode, press this key to return the standby mode and cancel current operations. Press this key to stop the alarm ringing once the alarm rings.

	Right Soft Key	Use the right soft keys to execute to functions indicated at the right of the prompt bar on the screen.
	Selection Keys / OK Key	Scrolling options in the function list or the phone book. In the edit mode, direction keys are used for moving the cursor.
	Numeric Keys	Used to enter numbers, letters and some special characters. In the standby mode, press and hold # key to activate Silent mode, long press the "*" Key to activate/ deactivate " Torch ", long press the "0" Key to activate " FM Radio ". In the edit mode, you can

IMPORTANT INFORMATION

Use of Passwords

Your mobile phone and SIM card have various passwords. Those passwords avoid unauthorized use of your phone and SIM card. You can change PIN, PIN2 and phone password in the "Settings > Security Settings".

Phone Code

The Phone code can be used to avoid unauthorized use of your phone. The factory setting for the phone code is 1122. If phone lock is enabled, you will be asked to input the phone password when you switch on your phone.

PIN (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card from unauthorized use.

The PIN code is usually supplied with the SIM card. When the PIN code request is enabled, the password is asked every time the phone is turned on. Three times wrong PIN input, the SIM card will be locked and you will need to use the PUK to unlock it. PUK is usually set by the network operator.

1. Enter the correct PUK to unlock the SIM card, and then enter the new PIN and press **OK**.
2. If you are prompted to enter the new PIN again, enter it and press **OK**.
3. If the PUK is correct, the SIM card will be unlocked and the PIN will be reset

PUK (8 digits)

The PUK {Personal Unblocking Key) code is required to change a blocked PIN code. Please contact your network operator for the code.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

PIN2 (4 to 8 digits)

The PIN2 code, supplied with some SIM card, is used for some functions, such as Call Cost, Fixed Dial and so on. Please consult your network operator to confirm whether your SIM card supports those services or not.

Three times wrong PIN2 code input, the SIM card will be locked and you will need to use the PUK2 to unlock it.

1. Enter the correct PUK2 to unlock PIN2, and then enter the new PIN2 and press **OK**.
2. If you are prompted to enter the new PIN2 again, enter it and press **OK**.

PUK2 (8 digits)

The PUK2 code, supplied with some SIM card, is required to change a blocked PIN2 code. It may be supplied with the SIM card. If not, contact your network operator.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

Barring Code

To activate call barring, you need a Barring Code. You obtain the password from your service provider.

Battery Information**Charging and Discharging**

- The charger is designed to be used in temperatures between 0°C to 40°C.
- Do not charge the phone in wet and damp conditions.

- Use only batteries approved by the phone manufacturer and recharge your battery only with the charges approved by the manufacturer.
- We strive to produce products in compliance with global environmental standards.
- The charger meets the standard for safety of information technology equipment and office equipment use. It must be used for this purpose only.
- Your phone is powered by a rechargeable battery. Full performance of the battery is achieved only after two or three complete charge and discharge cycles.
- When the battery level is low, "Low Battery" will be displayed on the LCD screen. If you have selected Alert Tone (Warning Tone of any profile in Profiles), the phone will sound the alert tone.
- When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than 12 hours, since overcharging may shorten its life.
- Temperature extremes will affect the ability of your battery to charge.

Tips for Battery

- Placing the battery in hot or cold places, such as in a closed car in summer or winter, will reduce the capacity and lifetime of the battery.
- Do not let the metal contacts on the battery touch other metal contacts. It could short-circuit and damage the battery. Use the battery only for its intended purpose.
- Do not disassemble or modify the battery by yourself.
- Do not clean the battery with water or any organic solvent.
- Always keep the battery dry.
- The battery can be charged and discharged many times but it will wear out as last. When the talk and standby time is obviously shorter than normal, please change the original battery approved by manufacturer.
- Do not short-circuit the battery.
- Turn off mobile phone before removing the battery.
- Do not dispose of batteries in fire.

- If you smell anything strange from the battery or find that the battery is overheated, you should stop using it immediately and contact the authorized After Service Center in your region.
- If you don't use the battery for a long time, please fully charge the battery before you store it.
- Batteries should never be placed in municipal waste. Batteries must be recycled or disposed of properly. Please follow local regulations for disposal of batteries.

Usage & Maintenance

To keep your product working well, take a moment to review the following usage & maintenance tips, which will help you to fulfill any warranty obligations and to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of children's reach.
- Your products are not water-resistant. Keep it dry. Precipitation, humidity and liquids contain minerals that will corrode the connectors.
- Always treat your products with care and keep it in a clean and dust-free place.
- Do not expose your product to extreme high or low temperatures. Your phone operates best in temperature between 15 °C and 25°C. Minimum and maximum temperatures recommended by the manufacturer are -10X and 55°C.
- Do not expose your product to open flames or lit tobacco products.
- Do not attempt to disassemble or modify your product. Only authorized personnel should perform service.
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it.
- Keep anything magnetic, such as credit cards, far away from your product.
- If you find that the battery has any crack, deformation or anything else, you should stop using the battery immediately.
- If the electrolyte leak out and contact your skin or clothes, you should immediately use soap and clean water to clean it. In case the

electrolyte spatters into your eyes, you must use the clean water to wash your eyes thoroughly and go to the hospital immediately.

- If your phone or any accessory doesn't function normally, please send them to the nearest authorized service facility. The qualified personnel there will assist you, and if necessary, arrange for service

Emergency Calls

This phone, like any wireless phones, operates using radio signals, wireless and landline networks which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies). To make an emergency call:

1> Switch your phone on.

Some networks may require that a valid SIM card is properly inserted in the phone

2> Dial the official emergency number. Emergency numbers vary by location.

While making an emergency call please remember to give all information as particularly as possible. Never hand off the call please until you are given permission to do so.

GETTING STARTED

First Call

- Insert a SIM card (Switch off your phone at first, and then remove the battery). Enter the area code and the phone number and press Calling Key.

Tip: Before you get started, you must insert a valid SIM card in your phone and charge the battery first.

- SIM Card: Please refer to "Inserting a SIM Card" for more reference on installation.

- Charging the battery: please refer to "Charging the battery" for more details.

Inserting a SIM Card

Your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (Personal Unlock Key), PUK2 (Personal Unlock Key2), IMSI (International Mobile Subscriber Identity), the network

information, the phonebook data, SMS (short messages) and other data are stored in your SIM card.

Note: This particular phone model only supports the SIM cards of 1.8V and 3V.

■ Some network operators don't offer PIN2 and PUK2, so functions using those passwords will be unavailable.

■ The SIM card and its contacts can be damaged by scratches or bending easily, so be careful while handling, inserting or removing the card.

■ Keep all miniature SIM cards out of children's reach.

Note: Always make sure the phone is switched off before you insert or remove the SIM card, otherwise it may damage the SIM card.

Mounting

Remove the battery cover by sliding it. Insert the SIM card, with the notch at the upper right and the gold contacts face down, into the card slot. Align the card to the arrow sign as the following picture shows:



Replace the battery and close the cover tightly.

Note:

■ If the SIM Card is installed improperly or damaged, the prompt words "Insert SIM" will display on the screen after you switch on your phone. Remove the SIM Card and check the way that performs as pictures show, and then mount it again.

■ If "Insert SIM" still appears on the screen after you have inserted the SIM correctly, there may be something wrong with your SIM card. Please ask the network operator to repair it.

■ If the screen displays that the SIM card is locked permanently, please consult with your network operator.

Inserting a T-Flash Card

Open the gold cap from the Hinge Type Connector. Lay the T-Flash card which gold contacts face down on the Connector, then close it. Align the card to the arrow sign as the following picture shows:



Charging the Battery

Note: Please always keep your phone connector and charger dry.

1. Connect the connector of the travel adapter to the phone.
2. Plug the travel adapter into a proper AC wall outlet.
3. When your phone indicates that the battery is fully charged, please pull the travel adapter out from the I/O socket of the phone.

Tip:

1. If the battery is totally empty or not enough, it may take a few minutes before the charging indicator appears on the screen.
2. You can turn on/off, and use the phone while charging.

Warning: Make sure that the standard voltage/power of the place where you charge the battery matches with the rated voltage/power of our travel adapter.

Making Calls

1. Enter the phone number {with the area code}
2. Press the Calling Key to make a call.
3. Press the Call End Key to end a call.

Clear Wrong Enters

Press the right soft key to delete the last character on the screen. Hold the right soft key will clear all you entered.

Making a call from the Phone Book

Press the right soft key to access the **Phone Book**. Scroll the Up/Down key to select the number you want, and press the Calling Key to call the number.

Last Number Redial

1. In the standby mode, press the Calling Key to access the **Call Logs**.
2. Press the Up/Down key to reach the desired number or name and press the Calling Key.

Speed Dialing

You can save 8 Speed Dial Numbers you often dial to positions titled with number keys from "2" to "9" respectively. Select "**Phonebook > Options > Phonebook settings > Speed Dial > Set Number**", and then set "**Status**" on. In the standby mode, press and hold the number key to dial the corresponding number.

Adjusting the Sound Volume

During a call, you can press the Up/Down Selection Key to adjust the earpiece volume.

Answering Calls

1. To answer an incoming call, press the Calling Key.
 2. To end or reject an incoming/ongoing call, press the Call End Key.
- Tip:** If the caller can be identified, the screen will display the caller's name. If the caller can't be identified, the screen will only display the caller's number..

Options in Call

Your phone provides a number of functions that you can use during a call.

During a call, you can access Hold/End single call, New Call, Phone Book, Messaging, Sound Recorder and other functions.

GUIDE TO MENU OPERATIOI

All function options about the mobile phone are listed as below with brief descriptions.

Phonebook

You can fast locate the number of the person you want to contact. Please enter the initial letter of the person's name, and related records about it will display in the middle of the screen. You can locate your

records by up or down key and press OK key, and then you can view, send SMS/ MMS, call and so on.

Messaging

SMS

Write Message

Please consult your home network operator for the SMS service.

Please press # Key to switch input methods while editing a message. You can enter letters and numbers, and insert pictures, rings and so on. (Support EMS service) Edit your message, and press * Key to insert special symbols.

Select **Options**, and then you can do the following operations: **Send to, Input Method, Insert Template, Advanced, and Save to Drafts.**

Inbox

The icon means an unread message or the message box is full. You won't receive new messages once the message box is full. Please delete unnecessary messages.

1. Select the unread message, and press the left soft key to read.
2. Select **Options**, and then you can do: reply, delete, forward and so on.

Outbox

In the **Outbox**, please select **Options**, and then you can send, edit or select other operations.

Drafts

In the Drafts, please select **Options**, and then you can do send form SIM1/SIM2, edit and some other operations.

Templates

Your mobile phone saves many messages in common use.

SMS settings

SIM1/SIM2 message settings

Profile Settings: You can set Profile Name, SMSC Address, Validity Period and Message Type as desired. Please consult your network

operator for the number. **Common Settings:** You can set Delivery Report, Reply Path and Save sent message. Delivery Report function enables you to receive the status report on whether short messages are sent out successfully or not. Please consult your network operator to obtain the function.

■ **Memory Status:** Check the rate of the SIM card and the phone's capacity compared to the total capacity. The exact capacity depends on the message content, the phone and the SIM card.

Preferred Storage: You can select the SIM card or Phone to save.

Schedule SMS

Press the left soft key to access the Add or Options > Add, and then you can set the date, time, message, enter number, and select SIM card. Press Done and Save the message will sent out the message to the number as your desire. **Note:** The time format of this function is 24 hours.

MMS

Write Message

Please consult your network operator to obtain the MMS service. While writing messages, you can select To, Cc, Bcc, Subject or Edit content.

To: the phone number or E-mail address are both OK.

Cc: send the MMS to others at the same time. Phone numbers or E-mail addresses are both OK

Bcc: send the MMS to others secretly at the same time. Phone numbers or E-mail addresses are both OK.

Subject: edit the Subject of the MMS.

Edit content: enter the text or add image, audio, attachment etc.

Inbox

The phone saves the received MMS into the inbox.

Outbox

In the **Outbox**, please select **Options**, and then you can view, delete or select other operations.

Drafts

In the **Drafts**, please select **Options**, and then you can send, edit or select other operations. **MMS Settings**

Please follow steps described as below:

Profiles: You can select one profile from several Profiles to activate, or edit profiles.

Common Settings:

1. **Compose:** You can configure Creation Mode, best page time, auto signature, signature, Picture Resizing.
2. **Send:** You can configure Validity period, Delivery Report, Read Report, Priority, Slide Time, and Delivery Time.
3. **Retrieve:** You can configure Home Network, Roaming, Read Report, and Delivery Report.
4. **Filter:** You can configure Anonymous and Advertisement.
5. **Memory Status:** You can check the Usage, Used space and Free space.

Voicemail Server

Scroll the Up/Down key to select **Voicemail Server** in the **Messaging** menu, and select **OK** to access **Voicemail Server**.

■ **Call Voicemail:** You can hear messages in the voice mailbox.

■ **Edit:** Input or modify the number and the name of voice mailbox.

Note: This service is supplied by the network, such as the message machine service. It enables the caller to leave messages when you can't or you are unwilling to answer the coming call. Your number for the voice mailbox is saved in this phone. In standby mode, hold the number key 1 to dial the number of the voice mailbox after the number is configured. Please consult your network operator for more details.

Broadcast message

This network service enables you to receive all kinds of text messages, such as weather reports or transportation information. Until now, there are several networks afford the service in this world. Please consult your network operator for more reference.

Receive Mode: Turn on or off the Cell Broadcast.

Read message: Scroll the Up/Down Key to select the message.

■ **Languages:** Select the desired language to display the broadcast message. **Note:** Your network operator decides whether the language is supported or not.

Channel Settings: You can choose Select, Add, Edit or Delete to receive the Broadcast information.

Call Center

Call History

SIM1/SIM2 Call history

Missed Calls

With this function, you can check recent missed calls.

Dialed Calls

With this function, you can check recent dialed calls.

Received Calls

With this function, you can check recent received calls.

Delete Call Logs

You can delete all records of missed, dialed or received calls with this function.

Call timers

- Last Call: The last call time can be checked.
- Dialed calls: The total time for all Dialed calls can be checked.
- Received calls: The total time for all received calls can be checked.
- Reset All: Reset the counters.

Call cost

You can check or reset Last call cost, Total cost, Reset cost. Max cost. Price per unit.

Text message Counter

- Sent: You can check and clear the number of sent messages.
- Received: You can check and clear the number of received messages.

Note: This function has nothing to do with the SIM card. The amount of sent or received messages will not change even if you change the SIM card.

GPRS Counter

You can check or reset the Last Sent, Last Received, All sent, All received and Reset

Counter.

Call Settings

SIM1 / SIM2 Call Settings:

Caller ID: (Network Service) you can select Set By Network, Hide ID or Send ID. The default status is the Set By Network.

Call Waiting: Activating this network service will notify you of a new incoming call while you have a call in progress (Network Service).

Call Divert: This network service allows you to divert your incoming calls to another number. For details, contact your service provider.

Call Barring: Activating this network service allows you to restrict incoming calls from your phone. For details, contact your service provider.

Line Switching: Switch to Line 1 or 2, the default one is Line 1.

Note: If Line 2 is selected, making calls from Line 2 depends on the network operator.

Close user Group (only for SIM1: If ON is selected, this network service specifies the group of people whom you can call and who can call you. For further information contact your network operator or service provider.

Advance settings

Auto Redial: While on, the phone will automatically redial the last called number after a while if you fail to connect to the number. The times for auto redial are up to 10 times. Press Cancel to end Auto Redial.

Call Time Display: If ON is selected, the call time will display.

Call Time Reminder: This function prompts you to end the call in time to save the call cost. You can select Off, Single or Periodic.

Auto quick end: Can set on or off and time of auto quick end.

User Profiles

Normal

1. Activate

2. Customize

■ **Tone Settings:** Includes SIM1/SIM2 Incoming Call, Power on, Power off, SIM1/SIM2 Message, and Keypad.

■ **Volume:** Includes the volume setting of Ring Tone and Key Tone. The volume degree is from 1 to 7.

■ **Alert Type:**

- Ring Only: Just ringing.
- Vib. Only: Just vibration, no ringing.
- Vib. then Ring: Ringing after vibration.

■ **Ring Type:**

Single: Rings once when a call is coming Repeat; Rings continuously when a call is coming Ascending. Rings continuously and the volume increases gradually

■ **Extra Tone:**

- Warning: If necessary, you will be warned by the prompt tone.
- Error: You will be warned by a tone if you make a mistake.
- Camp On: A prompt tone will be heard after searching the network successfully
- Connect: A prompt tone will be heard after getting through to the dialed number

■ **Answer Mode:**

- Any Key: Press any key to answer a call (Except of Hang Up Key and Right Soft Key)

Silent

Please refer to "Normal" for more details.

Note: Press the # key to enable or cancel the silent mode. In the Silent mode, you can not

hear any sounds except the vibration indicates a call or a message is coming.

Outdoor

Please refer to "Normal" for more details.

Indoor

Please refer to "Normal" for more details.

Headset

Insert the earphone and access the Headset mode automatically, This mode has no Activate options. Please refer to "Normal" for more details.

Bluetooth

You will enter into Bluetooth mode after you activate the Bluetooth function. This mode has no Activate option; the detailed operation has been shown in the "Normal".

Power Saving

This mode is only activated.

Media Center

File manager

You can use the function to manage all types of files saved in the Phone or Memory card.

Camera

Photos: To display the file list.

Camera Settings: To set some relative spec of the camera.

Image Settings: This includes photo size and photo quality adjustment

White balance: To set the balance of light

Scene Mode: To set the scene mode auto or night.

Effect settings: To set special shot effect.

Storage: To set the default storage path

Restore Default: Can restore default

Image viewer

Enter the "image viewer" to view the image files in the default folder "Photos".

Video recorder

Camcorder Settings: To set some spec, of the video recorder.

Video settings: You can set the video quality.

White balance: To set the balance of light.

Effect settings: To set special shot effect.

Storage: You can store the Video in the phone or Memory card.

Restore Default: Press the left soft key and select Yes to return to default settings.

Video Player

Play: You can play the specified video.

Send: You can forward the video to Bluetooth and so on.

Rename: You can rename the specified video.

Delete: You can delete the specified video.

Delete All Files: You can delete all videos.

Sort by: You can sort your videos by Name, Type, Time and so on.

Storage: To set the default storage path.

Audio Player

The Play/Stop, Back, Forward functions correspond to the Up/Down key, Left and Right Key respectively. Please Press the * / # key to adjust music volume. The available music formats. **Note:** To enjoy non-stop music, please download music to the **Music** folder of the Phone/ memory card. The Audio Player of the phone will automatically play music files from the **Music** folder. You may need to refresh it manually from the settings in case you have earlier opted for manual refresh settings.

Warning: Make sure that the volume is appropriate for your hearing while using the audio player.

Sound Recorder

The mobile phone supports **3** recording formats: WAV, AWB and AMR. You can record conversations, which may be saved to the Audio folder under Phone/ File Manager. If there is a record, press the left soft key you can select: New Record, Play, Append (only for AMR), Rename, Delete, List, Settings, Use as, and Send.

FM Radio

You can use your phone to listen to FM radio stations once the original Handset is plugged into the connector.

1. Press the Down key to Power on/ off the FM radio.
2. Press the OK key to Record the FM radio.
3. Press the Left/Right key to change the searching function of step to next frequency or next station alternately.

4. Press the */ # key to adjust radio volume.
5. Press Options to access the following options: channel list, manual input and so on. Note: In the standby mode, long press the 0 Key to activate FM.

Schedule FM Record

With this function, your phone can record the FM program as the schedules once the original Handset is plugged into the connector or antenna is opened. You can set On/Off, the date and time, repeat style, channel settings and record settings.

Melody Composer

The mobile phone enables you to compose your favorite music as the tune of the incoming call, alarm, etc.

Fun & Games

There are several interesting games and Motion game in the phone. Please refer to instructions from the menu for more details.

Note: Most of them need the network support. Please contact with your dealer and your network operator for more information.

Settings

In the standby mode, press the left soft key to access **Menu > Settings**.

Mobile Safety Center

Fire Wall

Private Call Guard: You can configure the following options as desired: State, Guard Type and Decency Reject Mode.

Encrypt

Privacy Keeper: You can encrypt the following options as desired: Phonebook, SMS, MMS, Call History, File Manager, Alarm, To do list and Photo.

Change Card Lock: on >: When you change the SIM card, all function options in the Privacy Keeper will be locked, you should input the PIM password to unlock it.

Flight Mode Lock: on>: All function options in the Privacy Keeper will be locked; you should input the PIM password to unlock it.

PIM Lock Password: You can change the PIM Lock Password to unlock it.

Note: The above menu is set to 1122 the initial password.

Dual SIM settings

You can choose one mode as your desire.

Phone settings

You can configure the following options as desired: Time and Date, Schedule Power On/Off, Language, Preferred Input Methods, Display Settings, Rotation play Ringtone, Motion sensor, Greeting Text, Dedicated Key, Auto Update of Date and Time, UART Settings, and Misc. settings.

Network settings

Please contact the network operator for the following network service.

SIM1/SIM2 network settings

1. Network Selection

New Search or Select Network can help search the network where you are in. You can select the selection mode: Automatic or Manual. When you select Automatic, the phone will make the preferential selection according to the network where the SIM card belongs. When you select Manual, you are required to select the same network as the registered network with the network operator by SIM card for your use.

2. Preferences

Select the Preferred Networks. The default network is the network where the SIM card belongs.

Security Settings

SIM1/SIM2 security settings

SIM1/SIM2 Lock

It is asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, it needs to input the PIN every time you power on. Three times wrong PIN input, it's asked to input PUK. PUK is used to release and modify the locked PIN. If PUK isn't provided or missed, please consult your network operator.

Fixed Dial

If this function is enabled, only phone numbers in the Fixed Dial List can be dialed. PIN2 is required for this function. Network support is also required.

Note: If you enter PIN2 after the phone is switched on, PIN2 is not required before the phone is switched off. Therefore, please switch the phone off and switch it on again after configuration, if you do not want others to change the status of the Fixed Dial.

Barred Dial (only for SIM1)

If this function is activated, the phone numbers in the barred dial list cannot be dialed. PIN2 is required for the function. Network support is also required.

Change Password

You can change SIM1/SIM2 PIN, SIM1/SIM2 PIN2.

Phone Lock

You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be required to enter the phone password. 4-8 numbers can be used for the phone password. The default phone password is 1122.

Auto Keypad Lock

You can lock/unlock the phone keyboard and set the Key Lock Time to None, 10 sec, 30 sec, 1 min, 5min.

Change Password

You can change Phone Password and Tracker Password.

Connectivity

Bluetooth

Power: Bluetooth Switched on or off.

Inquiry audio device: You can search audio device.

Remote control: Connect by remote HID host device.

My device: Can inquiry new device.

Active devices: Can use Active devices connected.

Settings: Some devices can be set up.

About: Can read information about my devices.

Restore Factory Settings

Access Settings to select Restore Factory Settings and input password then press OK. All settings can be restored to factory settings with this function. The default phone password is 1122.

Organizer

Calendar

You can View, View all, Add event. Jump to date and so on.

Tasks

You can View, Add, Edit, Delete, Delete overdue, Delete All, Jump to date, Send vCalendar and Save as file as desired. Start up the Task and press OK. Press **Options** to access to the next step to add a new memo.

Alarm

The mobile phone provides several alarms and you can set them as your need.

World Clock

Scroll to browse every city's time zones in the world map. The related date and time will display at the bottom of the screen.

Calculator

The calculator can add, subtract, multiply and divide.

Ebook reader

You can read E-book with "*.TXT" format which saved in your memory card.

Torch

You can turn on/ off the Torch light function.

In the standby mode, long press the " * "Key to activate/ deactivate Torch Light.

Services

STK Service

In addition to the functions available in the phone, your SIM card may provide additional services, which is supported by your SIM card. Please consult your network operator for more information.

Internet service

WAP enable you tour around the Internet world easily and pleasantly. Please follow the steps described as below:

1. **Homepage:** The default Internet Web Address.
2. **Bookmarks:** Save the Web address you often use.
3. **Recent Pages:** Records after you browse the Website.
4. **Input Address:** Press the left soft key to access Enter Address, and then input the web address to go to the Internet.
5. **Service Inbox:** Messages sent to users from the Web site.
6. **Settings:** You can configure: Select SIM, Profiles, Browser Options, Service Message Settings, Clear Cache, and Clear Cookies.

Data Account

- 1 **GSM Data:** Edit the GSM account.
2. **GPRS:** Edit the GPRS account.

Appendix A: Guidance on Entry Methods

This phone provides input methods, which can be used in editing the Phone Book, short messages, memos, greetings, alarms and other text applications.

The Icons of Input Methods

After entering different kinds of edit windows (including edit phonebook, short messages, etc.), the icons of input are as follows:

"123": The Entry method of Numeric appears as: "123"

"ABC": The entry method of Multitap ABC appears as: "ABC"

"Abe": The entry method of Multitap Abe appears as: "Abe"

"abc": The entry method of Multitap abc appears as: "abc"

"Gb ENG": The entry method of Smart ABC appears as: "Gb ENG"

"Gb eng": The entry method of Smart abc appears as: "Gb eng"

"Gb HI": The entry method of Smart Hindi appears as: "Gb HI"

"Hi": The entry method of Multitap Hindi appears as: "Hi"

"BE": The entry method of Multitap Bengali appears as: "BE "

How to Switch Between the Input Methods

Press the # key to switch the input methods.

e.g.: If the current input is Multitap ABC the screen will show "ABC". Press the # key, to go to Multitap Abc, and the screen will show "Abc".

How to Input Special Symbols

If you want to input special symbols, such as ". ! ? = < >", Etc., please following steps as below:

Press the left soft key to access Menu of "**options > Input Method > Insert Symbol > Select Symbol**". Press the Up/Down, or Left/Right Key to move the cursor in the symbol table, and select one symbol. Press the right soft key to cancel the symbols selection. In the edit mode, you can press the * Key to display the symbols.

Appendix B: Troubleshooting

This section lists some problems that you might meet while using your phone. If you feel that your phone do not operate normally, please reset settings first, and then follow Troubleshooting Guide. If you are still unable to solve problems, please contact the

Problems	Solutions
Can not answer or make a call	<p>Make sure that the phone has been switched on.</p> <p>Make sure that the battery is charged.</p> <p>Make sure that the signal intensity is high enough.</p> <p>Make sure the own number function in the call setting is system preset or number sending.</p> <p>Make sure the line switch in call setting is the system preset line. Check whether you have set up call barring or fixed dialing or any other safety function.</p> <p>Check whether you have set up call diverts. Check whether you have inserted the proper SIM card correctly.</p>
Low voice	Check if the volume has been set too low.
No ring	<p>Check whether you have set up the "Light Only" option.</p> <p>Check whether the ring volume is not too low</p> <p>Move away from a noisy place to check if you can hear the phone ringing.</p> <p>Check whether you have set up call diverts.</p>
LCD unclear	Check whether the contrast has been set too low.
T-Flash card detect slowly	<p>Format your T-Flash card with your phone.</p> <p>Note: To protect your files from getting lost, please backup the important information into the safe place before you formatting card.</p>